

Voice Commands for 2006 Prius Navigation System

Operating voice recognition

Push talk switch briefly, give command after beep, command is executed.

Checking a usable command-Command list displayed on Help screen

In case of operation error-to retry, push talk switch briefly during voice guidance.

Give command again.

Canceling voice recognition-push talk switch continuously or push cancel on screen. Voice recognition canceled after long beep.

If you are having trouble please check that you

1. Gave a command AFTER the short beep
2. Gave a command from the command list
3. Gave a command correctly
4. Gave a command within 6 seconds

NAV Navigation

to change screen

MAP

HELP

CANCEL

to change map scale

ZOOM IN

ZOOM OUT

to change right map scale

RIGHT MAP ZOOM IN

RIGHT MAP ZOOM OUT

to change map direction

NORTH UP

HEADING UP

MAP DIRECTION

to change direction on right map

RIGHT MAP NORTH UP

RIGHT MAP HEADING UP

RIGHT MAP MAP DIRECTION

to change guidance mode

DUAL MAP

SINGLE MAP

ARROW GUIDANCE

TURN LIST GUIDANCE

FREEWAY GUIDANCE

INTERSECTION GUIDANCE

COMPASS MODE

to register a marked point

MARK THIS POINT

to check route

**ENTIRE ROUTE MAP
NEXT DESTINATION MAP
FIRST DESTINATION MAP
SECOND DESTINATION MAP
THIRD DESTINATION MAP
FOURTH DESTINATION MAP
FIFTH DESTINATION MAP
FINAL DESTINATION MAP**

to change route

**QUICK ONE
QUICK TWO
SHORT
DETOUR
DETOUR ENTIRE ROUTE**

to change guidance states

**SUSPEND GUIDANCE
RESUME GUIDANCE
REPEAT GUIDANCE
LOUDER
SOFTER**

under confirmation

**YES
NO**

to delete destination

**DELETE NEXT DESTINATION
DELETE FINAL DESTINATION
DELETE ALL DESTINATIONS**

POI Points of Interest

to put icons on map for points of interest

Push talk switch briefly, give command after beep, command is executed.

to remove icons from map (icon off)

HIDE ALL ICONS

restaurant

**RESTAURANT
FAST FOOD
SEAFOOD
AMERICAN RESTAURANT
CHINESE RESTAURANT
CONTINENTAL RESTAURANT
FRENCH RESTAURANT
ITALIAN RESTAURANT
JAPANESE RESTAURANT**

**MEXICAN RESTAURANT
THAI RESTAURANT
OTHER RESTAURANT**

shopping

**CONVENIENCE STORE
DEPARTMENT STORE
GROCERY STORE
HOME AND GARDEN
PHARMACY
SHOPPING MALL
SPECIALTY FOOD STORE
OTHER RETAIL STORES**

automotive

**AUTO CLUB
CAR WASH
GAS STATION
PARKING
SERVICE AND MAINTENANCE
OTHER AUTOMOTIVE STORES
LEXUS DEALERSHIP (????)
TOYOTA DEALERSHIP**

travel

**AIRPORT
BUS STATION
CAMPGROUND
FERRY TERMINAL
HOTEL
RENTAL CAR AGENCY
REST AREA
TRAIN STATION**

recreation

**AMUSEMENT PARK
CASINO
CINEMA
GARDENS
GOLF COURSE
HISTORICAL MONUMENTS
HORSE RACING
MARINA
MUSEUM
NATIONAL AND STATE PARKS
SKI RESORT
SPEEDWAY
SPORTS COMPLEX
THEATER**

**TOURIST ATTRACTION
TOURIST INFORMATION
VIDEO RENTAL
WINERY**

community

**CITY CENTER
CONVENTION CENTER
COURT HOUSE
FIRE STATION
GOVERNMENT OFFICES
HIGHER EDUCATION
HOSPITAL
LIBRARY
PARKS
POLICE STATION
POST OFFICE
SCHOOL**

banking

**ATM
BANK
OTHER FINANCIAL SERVICES**

other

**BEAUTY AND BARBER SHOP
COFFEE HOUSE
DRY CLEANING
HEALTH AND FITNESS CLUB
ICECREAM PARLOR
OTHER BUSINESS FACILITY**

DEST Destination

How to set a destination: Push the talk switch briefly, give a command. The confirmation screen is displayed. When entering numbers use single digits. Example one five one NOT one hundred fifty one.

Continued-push talk switch briefly, give command below

**ENTER DESTINATION
ADD TO DESTINATION
REPLACE DESTINATION**

set by map

SET DESTINATION

set by marked point

**HOME
QUICK ACCESS NUMBER ONE
QUICK ACCESS NUMBER TWO
QUICK ACCESS NUMBER THREE
QUICK ACCESS NUMBER FOUR
QUICK ACCESS NUMBER FIVE**

set by previous point

**PREVIOUS START POINT
PREVIOUS DESTINATION**

set by nearest POI

**NEAREST (INSERT POI CATEGORY HERE)
SHOW LIST**

set by address

ADDRESS

give command "ADDRESS" then give address step by step according to guidance. State name, City name, Street name, House number. To change address give command "CHANGE _____" as follows.

**CHANGE STATE
CHANGE CITY
CHANGE STREET
CHANGE HOUSE NUMBER
NEXT CANDIDATE**

AUDIO only connected devices will be recognized

to select audio mode

**RADIO
AM
FM
FM ONE
FM TWO
CD
CD CHANGER**

to turn audio on/off

AUDIO

radio operation

**SEEK UP
SEEK DOWN**

disc operation

**TRACK UP
TRACK DOWN
PREVIOUS TRACK
DISC UP
DISC DOWN**

TEL Telephone

Name Tag operation; briefly push talk switch, give command Ex: 'Dial by Name' continue according to guidance instructions. "dial" command determines starting dial. "dial by number" according to guidance give the number 0-9 using single digit. "correction" erases current digit.

How to send tone according to guidance give number “0-9” using single digit. “star” and “pound” also available. to send the tone give command “yes” on confirmation screen.

to set dial number

DIAL BY NAME

next you will be prompted for a name. This will be one you prerecorded on your address book list or speed dial list.

NEXT CANDIDATE

DIAL

CANCEL

HELP

DIAL BY NUMBER

follow guidance instructions entering one digit at a time. if you make a mistake use correction command to erase one digit.

CORRECTION

DELETE

DIAL

CANCEL

HELP

CANCEL

HELP

to send dial tone during call

briefly push talk switch, say a number. confirm yes or no

ONE, TWO, THREE, FOUR, FIVE, SIX, SEVEN, EIGHT, NINE,

ZERO

YES

NO

CLIMATE

to turn on/off automatic air conditioning

AUTOMATIC AIR CONDITIONING

to raise or lower air temperature setting

RAISE TEMPERATURE

LOWER TEMPERATURE

to adjust temperature to a specific degree setting between 65 F and 85 F

SIXTY FIVE DEGREES

SIXTY SIX DEGREES

SIXTY SEVEN DEGREES

SIXTY EIGHT DEGREES

SIXTY NINE DEGREES

SEVENTY DEGREES

SEVENTY ONE DEGREES

SEVENTY TWO DEGREES

SEVENTY THREE DEGREES

SEVENTY FOUR DEGREES

SEVENTY FIVE DEGREES

SEVENTY SIX DEGREES

SEVENTY SEVEN DEGREES
SEVENTY EIGHT DEGREES
SEVENTY NINE DEGREES
EIGHTY DEGREES
EIGHTY ONE DEGREES
EIGHTY TWO DEGREES
EIGHTY THREE DEGREES
EIGHTY FOUR DEGREES
EIGHTY FIVE DEGREES