Technical Service BULLETIN

November 23, 2005

Title: ERASING DTC B1200, B1207, & B1271 **DURING PDS**

Models:

'06 Prius



Introduction

When the ignition switch is turned to the "ON" position for more than 10 seconds with the DOME fuse disconnected, a communication stop is recorded in the Gateway ECU, Multiplex Network ECU, Smart ECU, and/or the combination meter. As a result, three DTCs (B1200, B1207, and B1271) are memorized in the DTC history.

After installing the DOME fuse during Pre-Delivery Service, clear DTCs B1200, B1207, and B1271.

Applicable Vehicles

• 2006 model year Prius vehicles.

Required **SSTs**

ITEM NO.	SPECIAL SERVICE TOOLS (SSTs)	PART NUMBER	QTY	DRW**
1	Toyota Diagnostic Tester Kit* NOTE: • All components from this kit/set are required • 12 Megabyte Diagnostic Tester Program Card (P/N 01002593–005) with version 13.0a Software (or later) is required	TOY220036	1	9
2	CAN Interface Module Kit* NOTE: • All components from this kit/set are required	01002744	1	9

Essential SSTs.

NOTE:

Additional Diagnostic Tester Kits, CAN Interface Modules, Program Cards, or other SSTs may be ordered by calling SPX/OTC at 1-800-933-8335.

Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	ı	ı	-	_




Refers to drawer number in SST Storage System.

Data & Freeze Frame Data Erasing Procedure

(With DOME Fuse Installed)

- 1. Connect Diagnostic Tester to DLC3.
- 2. Turn the ignition to the "ON" position.
- Accessing the OBD/MOBD function, Check Codes (ALL) to view all stored DTCs.
- 4. Confirm only DTCs B1200, B1207, and B1271 are the only codes stored in memory.



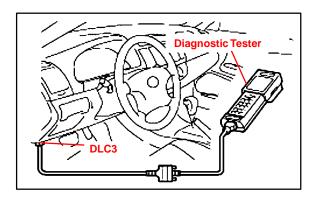

NOTE:

- DTCs B1200, B1207, and B1271 will NOT set the Master Warning Light. If the master warning list is set, other DTCs may be present.
- If any other codes exist, repair the applicable system according to the diagnostic repair procedure in the Technical Information System (TIS).