



Technical Service BULLETIN

December 7, 2005

Title:

INITIALIZATION OF POWER WINDOW

Models:

'06 Prius

PG013-05

PRODUCT GENERAL INFORMATION

Introduction If the battery terminal has been disconnected, the “one-touch open and close” and “jam protection” functions of the driver’s door power window will be inoperative due to loss of the driver’s door power window position memory stored in the microcomputer. Therefore, initialization of the driver’s door power window will be necessary after the battery is reconnected.

NOTE:

Any time the battery terminal has been disconnected, initialize the power window after reconnecting the battery terminal.

**Applicable
Vehicles**


- 2006 model year **Prius** vehicles.

**Warranty
Information**

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	—	—	—	—

**Initialization
Procedure**

1. Turn the ignition switch to the “ON” position. At this time, the power window switch for the driver’s door window should be blinking.
2. Push down and hold the driver’s door power window switch to completely open the window.

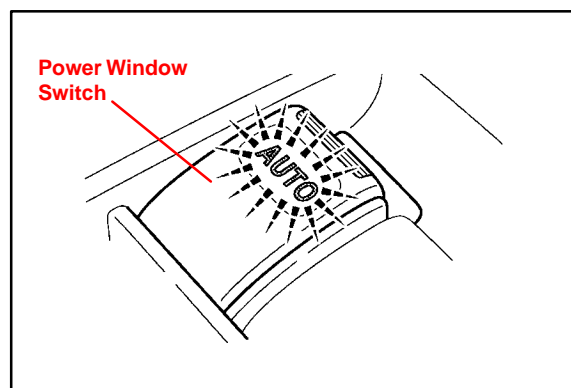

Initialization Procedure
(Continued)

3. Pull and hold up the driver's door power window switch until the window closes. Continue holding the switch for approximately one second until the switch changes from blinking to a constant illumination.
4. Check for proper operation of the "one-touch open and close" by fully pushing the switch "DOWN" once and fully pulling the switch "UP" once.

NOTE:

Jam protection function becomes effective through the above initialization procedure.

